



Arm types

All SC70A Series closers come with full cover, standard arm and screw pack.

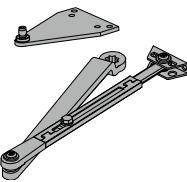


Regular arm, SC70A-3077PA

Non-handed arm with adjustable forearm assembly to accommodate a range of doors and frame reveal conditions. Mounts hinge side, top jamb or parallel arm. PA shoe included to allow installation in a parallel arm configuration.

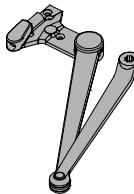


Spring-n-stop arm, SC70A-3077SS

Optional, non-handed, extra heavy-duty, forged parallel arm includes an integral spring stop and non-adjustable forearm assembly for high volume traffic or potentially abusive installation conditions.

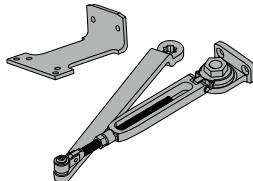


Hold-open arm, SC70A-3049PA

Optional, non-handed, hold open arm with adjustable forearm assembly to accommodate a range of doors and frame reveal conditions. Mounts hinge side, top jamb or parallel arm. PA shoe included to allow installation in a parallel arm configuration.

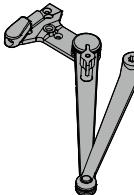

Spring-n-stop hold-open arm, SC70A-3049SS

Optional, non-handed, extra heavy-duty, forged parallel arm includes an integral spring stop and non-adjustable forearm assembly for high volume traffic or potentially abusive installation conditions. Also includes a manually selective hold-open function.

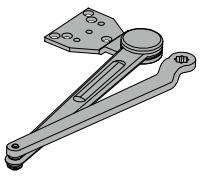


Heavy duty regular arm, SC70A-3077HD

Optional, non-handed, stamped, heavy duty, parallel arm for use in high-traffic applications.




Forged arm, SC70A-3077FA

Optional, non-handed, extra heavy-duty arm with parallel arm bracket. Includes a forged steel main arm and forearm for maximum durability in high traffic and/or abusive applications. Parallel Arm (PA) bracket is a permanent feature, installation on "push" side of the door in a parallel arm type configuration is required.

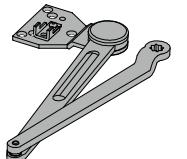


Dead stop arm, SC70A-3077DS

Optional, non-handed, stamped, heavy duty, parallel arm includes a positive mechanical stop and non-adjustable forearm assembly for high volume traffic or potentially abusive installation conditions.

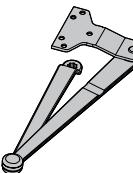

Forged arm with hold open, SC70A-3049FA


Optional, left or right handed, extra heavy-duty arm with parallel arm bracket that incorporates a hold open feature. Includes a forged steel main arm and forearm for maximum durability in high traffic and/or abusive applications. Parallel Arm (PA) bracket is a permanent feature, installation on "push" side of the door in a parallel arm type configuration is required.

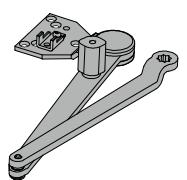

Dead stop hold-open arm, SC70A-3049DS


Optional, non-handed, stamped, heavy duty, hold-open parallel arm includes a positive mechanical stop and non-adjustable forearm assembly for high volume traffic or potentially abusive installation conditions. Also includes a manually selective hold-open function.

 Installation accessories




Soffit shoe support, SC70A-30

Provides anchorage for fifth screw used with soffit shoe, where reveal is less than $3\frac{1}{16}$ " (78mm).

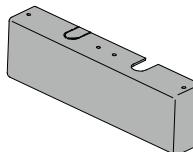


Cover, SC70A-72

Standard, non-handed, full plastic cover encloses the closer body.

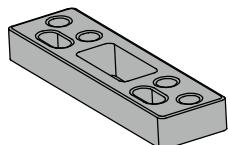


Blade stop spacer, SC70A-61

Required to lower parallel arm shoe to clear $\frac{1}{2}$ " (13mm) blade stop.

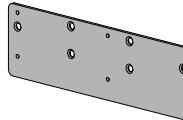


Plate, SC70A-18

Required for hinge side mount where top rail is less than $3\frac{7}{8}$ " (98mm). Required for top jamb mounting where head frame is less than $3\frac{7}{8}$ " (98mm).

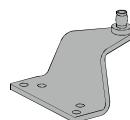

Auxiliary shoe, SC70A-62A

Requires a top rail of 7" (178mm). Optional shoe replaces PA shoe for parallel arm mounting of regular arm with overhead holder/stop.

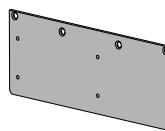

Plate, SC70A-18PA

Required for parallel arm mounting where top rail is less than 6" (152 mm), measured from the stop. Plate requires $1\frac{3}{4}$ " (44mm) minimum top rail measured from stop.