



**BHMA** CERTIFIED **NO HASSLE** WARRANTY



**COMMAND  
ACCESS**


# MLRK1-COR

## INSERT INSTRUCTIONS

The Command Access MLRK1 is a field-installable motorized latch-retraction kit for:

- MLRK1-COR - Corbin 4000/5000 and Yale 7000 series devices

A.

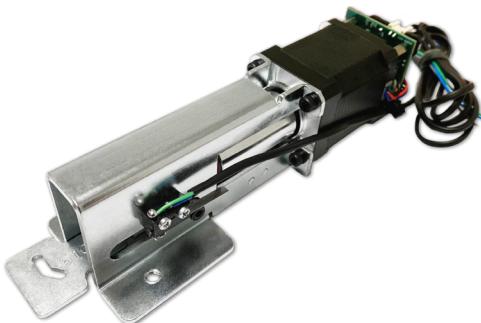

B.



C.



D.



### KIT INCLUDES

- A. 60417 – MLRK1 MOTOR
- B. 40176 – PHILLIPS HEAD SCREWS (3)
- C. 40144 – DOGGING HOLE CAP
- D. 50944 - MOLEX PIGTAIL

### TOOLS REQUIRED

- CORDLESS DRILL
- #2 PHILLIPS SCREWDRIVER



INSTALLATION VIDEO

### SPECIFICATIONS

- INPUT VOLTAGE: 24VDC +/- 10%
- AVERAGE LATCH RETRACTION CURRENT: 900 MA
- AVERAGE HOLDING CURRENT: 215 MA
- WIRE GAUGE: MINIMUM 18 GAUGE
- DIRECT WIRE RUN - NO RELAYS OR ACCESS CONTROL UNITS IN-BETWEEN POWER SUPPLY & MODULE

### OPTIONAL BUILT-IN REX


- SPDT - RATED .5A @24V
- GREEN = COMMON (C)
- BLUE = NORMALLY OPEN (NO)
- GREY = NORMALLY CLOSED (NC)

### RECOMMENDED POWER SUPPLIES:

All Command Access exit devices & field installable kits have been thoroughly cycle tested with Command Access power supplies at our factory. If you plan on using a non-Command power supply it must be a filtered & regulated linear power supply.

# INSTALLATION INSTRUCTIONS

## 1 Remove Filler Plate

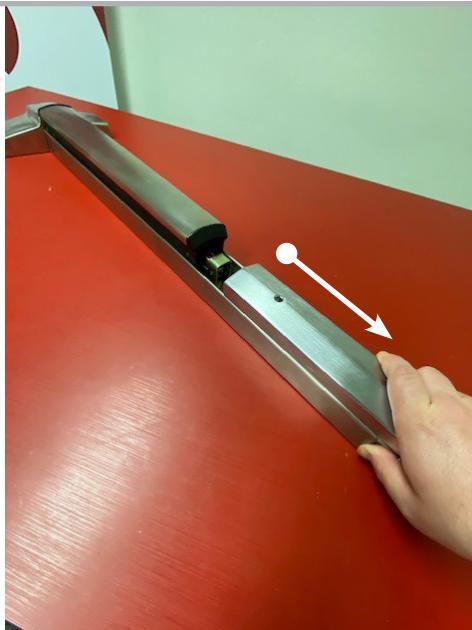


## 2 Remove Dogging Assembly if present (2 Phillips screws )




# INSTALLATION INSTRUCTIONS

**3** Depress Device to expose **Dogging Arm**, line up cut out on **Retraction Arm** with tab on **Exit Device**.

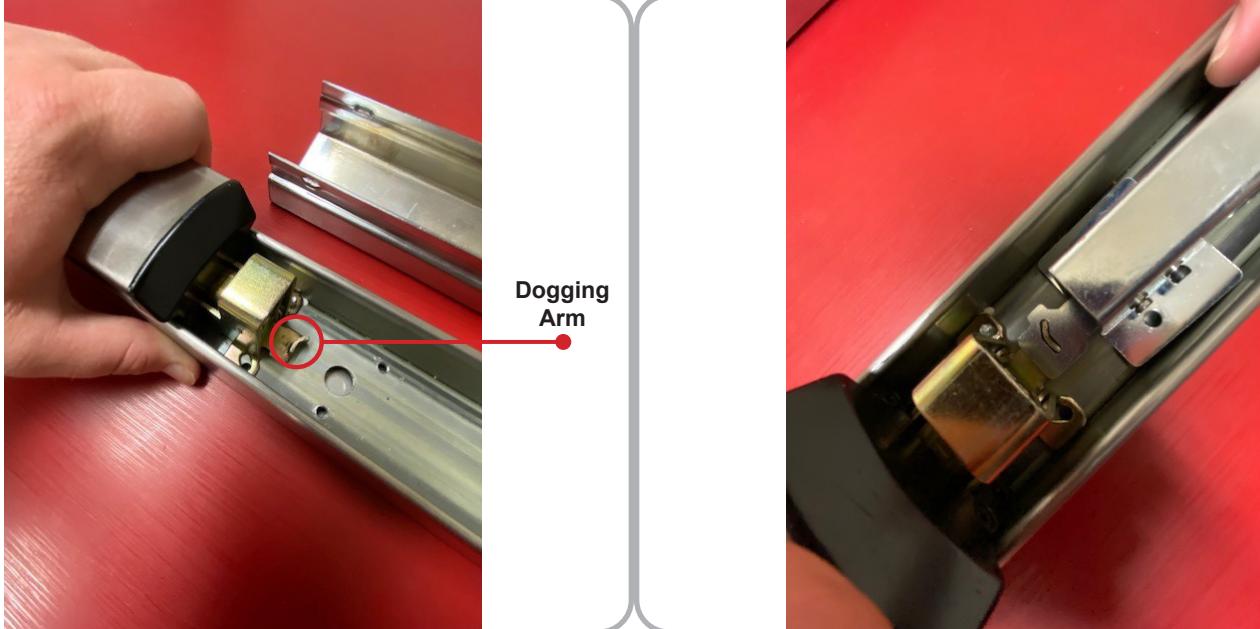

**4** Once in place pull back on the kit slightly to line up the mounting holes with the existing screw holes **Exit Device** and install (2) **Phillips mounting screws**.

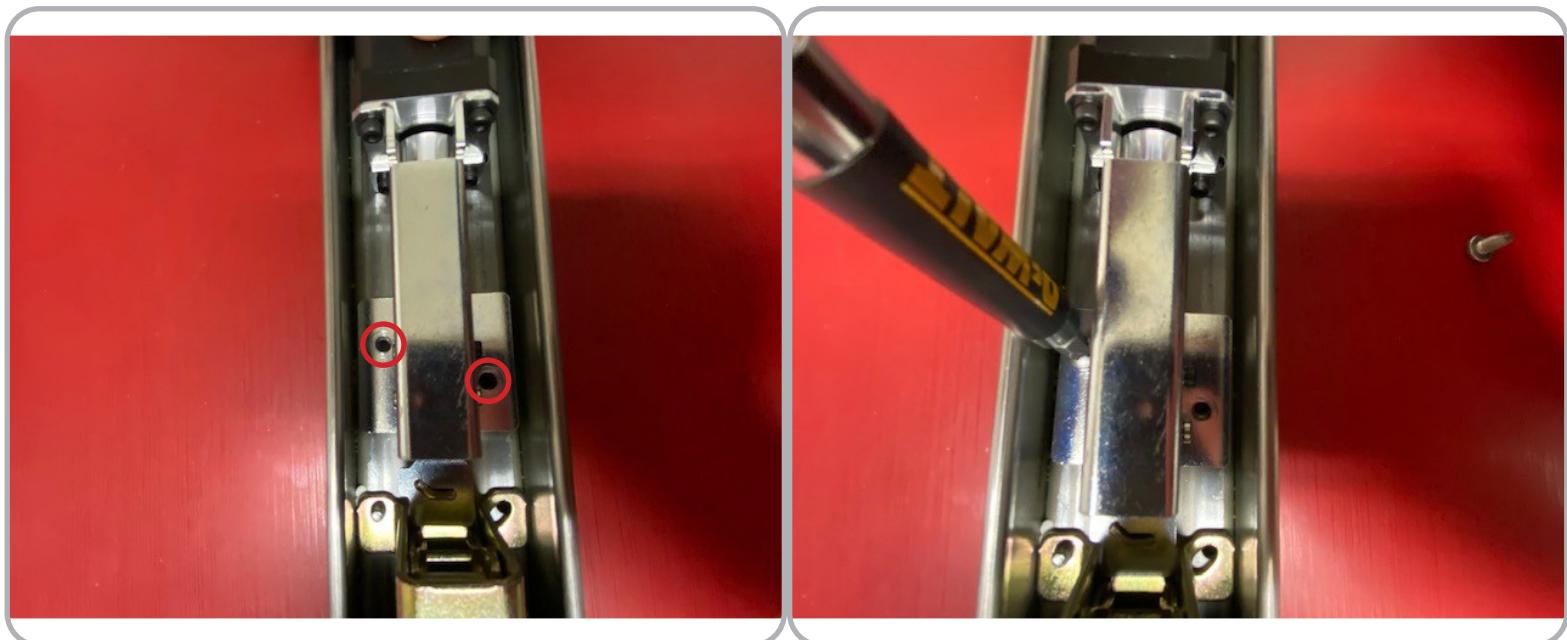


# INSTALLATION INSTRUCTIONS



5

Connect to power and set the **PTS** adjustment by following the instructions.

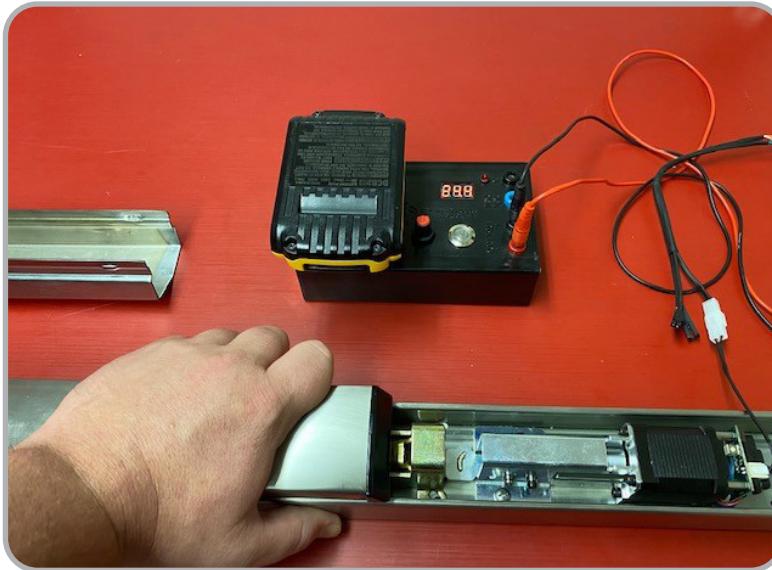


## SETTING PUSH TO SET (PTS)

### TO PUT THE DEVICE IN PTS MODE, FOLLOW THESE STEPS:

- Depress the MM5 button.
- Apply power and listen for short beep, which indicates that the device is now in PTS mode.
- Remove power.
- Release the button, but make sure you don't release it until the power is no longer going to the motor.

### SET ADJUSTMENT:

- Depress the pushpad fully then release it 1/32", & hold.
- Apply power.
- Continue to hold the pushpad until the device gives you long beep.
- Remove power.

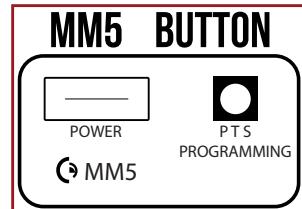

Note: Test the new location multiple times; if not to your liking, repeat the steps.

## TROUBLESHOOTING & DIAGNOSTICS

BEEPS	EXPLANATION	SOLUTION
2 BEEPS	OVER VOLTAGE	> 30V UNIT WILL SHUT DOWN. CHECK VOLTAGE & ADJUST TO 24 V.
3 BEEPS	UNDER VOLTAGE	< 20V UNIT WILL SHUT DOWN. CHECK VOLTAGE & ADJUST TO 24 V.
4 BEEPS	FAILED SENSOR	VERIFY ALL 3 SENSOR WIRES ARE INSTALLED CORRECTLY. REPLACE SENSOR IF PROBLEM PERSISTS BY CONTACTING OFFICE.
5 BEEPS	RETRACTION OR DOGGING FAILURE	AFTER 1ST FAIL: 5 BEEPS THEN IMMEDIATELY ATTEMPTS TO RETRACT AGAIN. AFTER 2ND FAIL: 5 BEEPS WITH PAUSE IN-BETWEEN FOR 30 SECONDS THEN DEVICE ATTEMPTS TO RETRACT AGAIN. AFTER 3RD FAIL: 5 BEEPS EVERY 7 MINUTES, DEVICE WILL NOT ATTEMPT TO RETRACT.  TO RESET: DEPRESS BAR FOR 5 SECONDS AT ANY TIME.