

Automatic Operator Sensors & Accessories




**8310-805
Door Position Switch**

- Surface mount
- Used when 8310-804-1 or 8310-804-2 Door Mounted Safety Sensor and 8310-845 Relay Module is installed in conjunction w/ either a electrohydraulic, pneumatic or Benchmark Automatic Operator
- Disables approach side sensor when door is closed




**8310-805C
Door Position Switch**

- Concealed
- Used when 8310-804-1 or 8310-804-2 Door Mounted Safety Sensor and 8310-845 Relay Module is installed in conjunction w/ either a electrohydraulic, pneumatic or Benchmark Automatic Operator
- Disables approach side sensor when door is closed

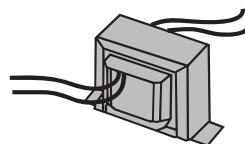


**8310-824
Transformer, 24v,**

 - Hardwired
- Optional accessory - Used to remotely power any 24v sensor/receiver



**8310-824P
Transformer**

- 24v, plug in
- Optional accessory - Used to remotely power any 24v sensor/receiver

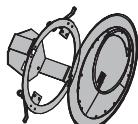

**8310-854ECA
Drop Ceiling Bracket**

- Bracket used w/ 8310-854 Header Mount Activation Sensor
- Optional



**8310-854ERA
Protective Cover**

- Cover used w/ 8310-854 Header Mount Activation Sensor
- Optional



**8310-3803
Wireless Conversion Kit**

- Jamb mount, 3v
- Converts standard jamb actuator to wireless version
- Includes 8310-865 Receiver, 8310-844J (2) Jamb Mounted
- Transmitter - Requires 8310-819S or 8310-819F Jamb Box



**8310-3809
Wireless Conversion Kit**

- Jamb mount, 9v
- Converts standard wall mount actuator to wireless version
- Includes 8310-865 Receiver, 8310-844 (2) Wall Mount Transmitter
- Requires Surface or Flush Box and Weather Ring



**8310-3889
Safety Module Kit**

- Used w/ 7901, 7902, 7981, 7982 Control Boxes.
- Includes 8310-3888 Safety Module Harness. Required when 8310-877 Header Mount Safety Sensor is used w/ Pneumatic
- Automatic Operators (2610, 4810, 4820 or 4840 Series)

**8310-3888
Harness**

- Safety module, service part
- Safety Module Harness for pneumatic control box