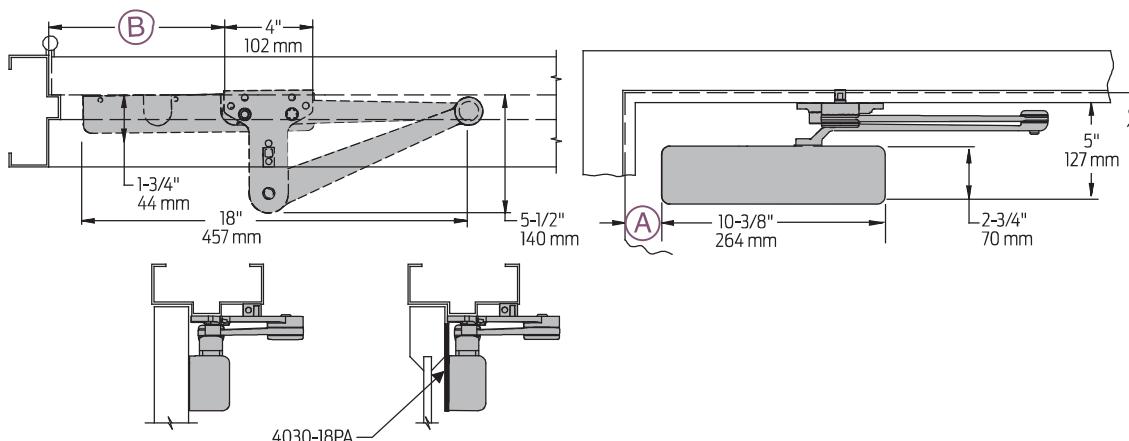
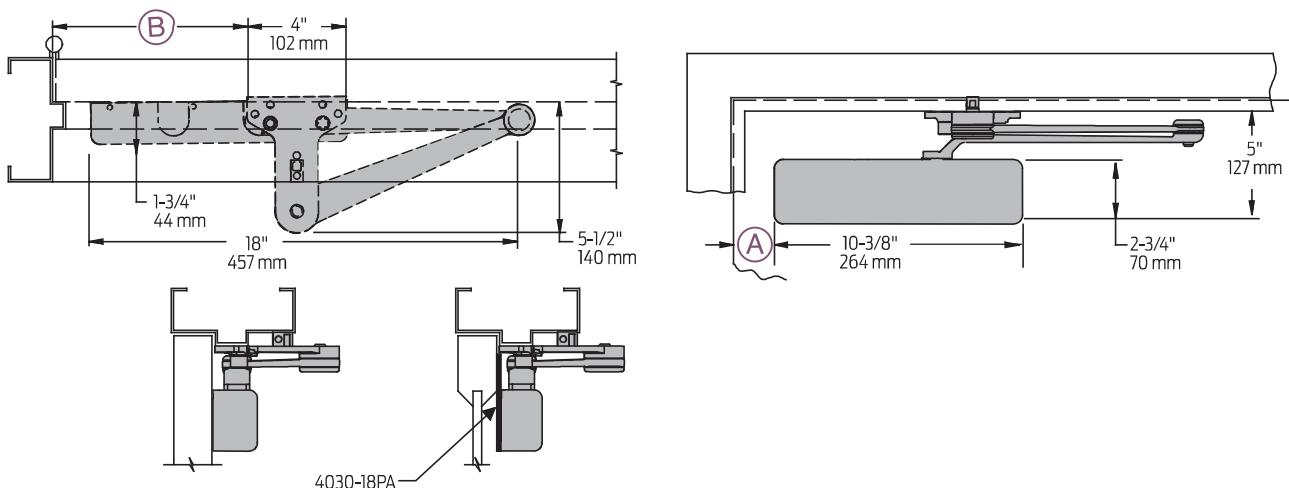


Mounting details

CUSH and Spring CUSH
Mounting**CUSH mount****Spring CUSH mount**

Spring CUSH dead stop points are approximately 5° greater than templated stop point.

**Clearance**

For CUSH or SPRING CUSH shoe is 5-1/2" (140 mm) from door face

Head Frame

Flush or rabbed requires CUSH FLUSH PANEL ADAPTER, 4030-419

CUSH or Spring CUSH ARM

Requires SHOE SUPPORT, 4030-30 for fifth screw anchorage where reveal is less than 3-1/16" (78 mm)

Maximum opening

CUSH and SPRING CUSH arms can be templated for maximum opening/hold-open point at:

85°: A = 3-5/8 (92 mm)
B = 9-3/4" (248 mm)

90°: A = 3" (76 mm)
B = 9-1/8" (232 mm)

100°*: A = 1-7/8" (48 mm)
B = 8" (203 mm)

*100° mounting will not work with swing clear hinges.

Note:

• 4031 closers ordered with CUSH or SPRING CUSH arms include 4030-201 FIFTH HOLE SPACER to support the shoe