



Notes:

1. Dimensions given in inches and (mm).
2. Backset is measured from centerline of bevel which is centerpoint of door thickness.
3. Rose and lever dimensions vary by design.
4. Metal door reinforcement to be at least equivalent to that shown on ANSI A115.2.


TEMPLATE CROSS REFERENCE	
DESCRIPTION	TEMPLATE
CL3100 Series VR Lever Lock	T31193

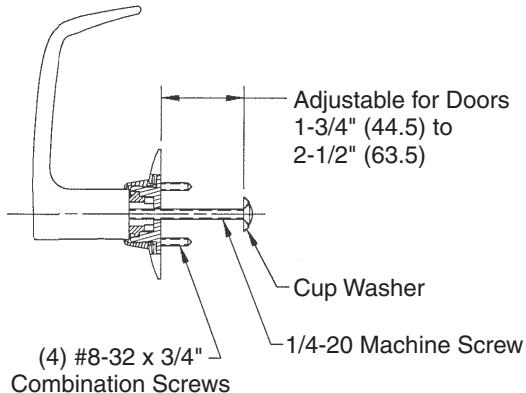

CL3150
Half Dummy Trim

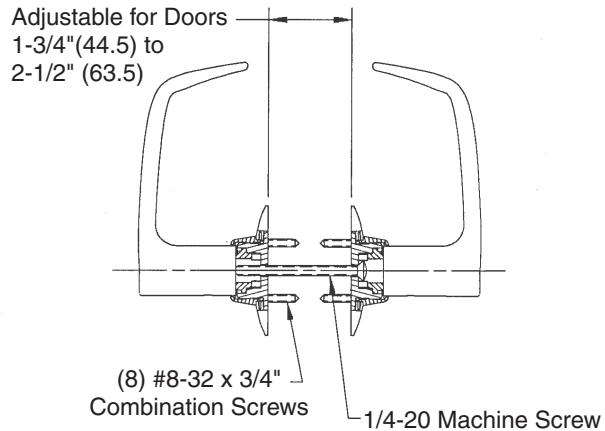

CL3170
Full Dummy Trim

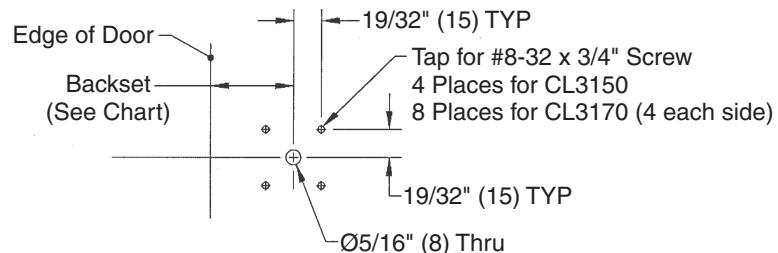

Suggested Detail
of Door Preparation

BACKSETS		
2-3/4" (70)	3-3/4" (95)	5" (127)
Standard	B334 Option	B500 Option

RESPONSIBILITY
DOOR AND FRAME MANUFACTURERS ARE
RESPONSIBLE FOR PROVIDING ADEQUATE
CONSTRUCTION OR REINFORCEMENTS FOR
PROPER INSTALLATION OF HARDWARE SHOWN.
ALL ARCHITECTURAL BUILDERS HARDWARE MUST
BE INSTALLED ON PROPERLY REINFORCED
DOORS AND FRAMES, REGARDLESS OF TYPE,
MATERIAL, OR METHOD OF CONSTRUCTION.

CL3150, CL3170 Dummy Trim

**Corbin
Russwin**

ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES
TEMPLATE NUMBER

DO NOT SCALE DRAWING

T31194

DATE **03-12**