

MOUNTING INFORMATION

- **For Fire Rated Exit Devices:**
Sex nuts or through bolts
are required for wood core, wood
and plastic covered composite doors,
and any type of door without
reinforcements.

SINGLE DOOR APPLICATIONS ONLY

TEMPLATE CROSS REFERENCE



(FOR DOUBLE DOOR APPLICATIONS)

DESCRIPTION	TEMPLATE
507 MULLION	T30509
707A (KM) Mullion	T30944
708A (KM) Mullion	T30944

①

FRAME STOP	BACKSET A	MINIMUM STILE
5/8 (15.9)	2-11/16 (68.3)	4-1/8 (104.8)
1/2 (12.7)	2-9/16 (65.1)	4" (101.6)

LHR SHOWN
RHR OPPOSITE

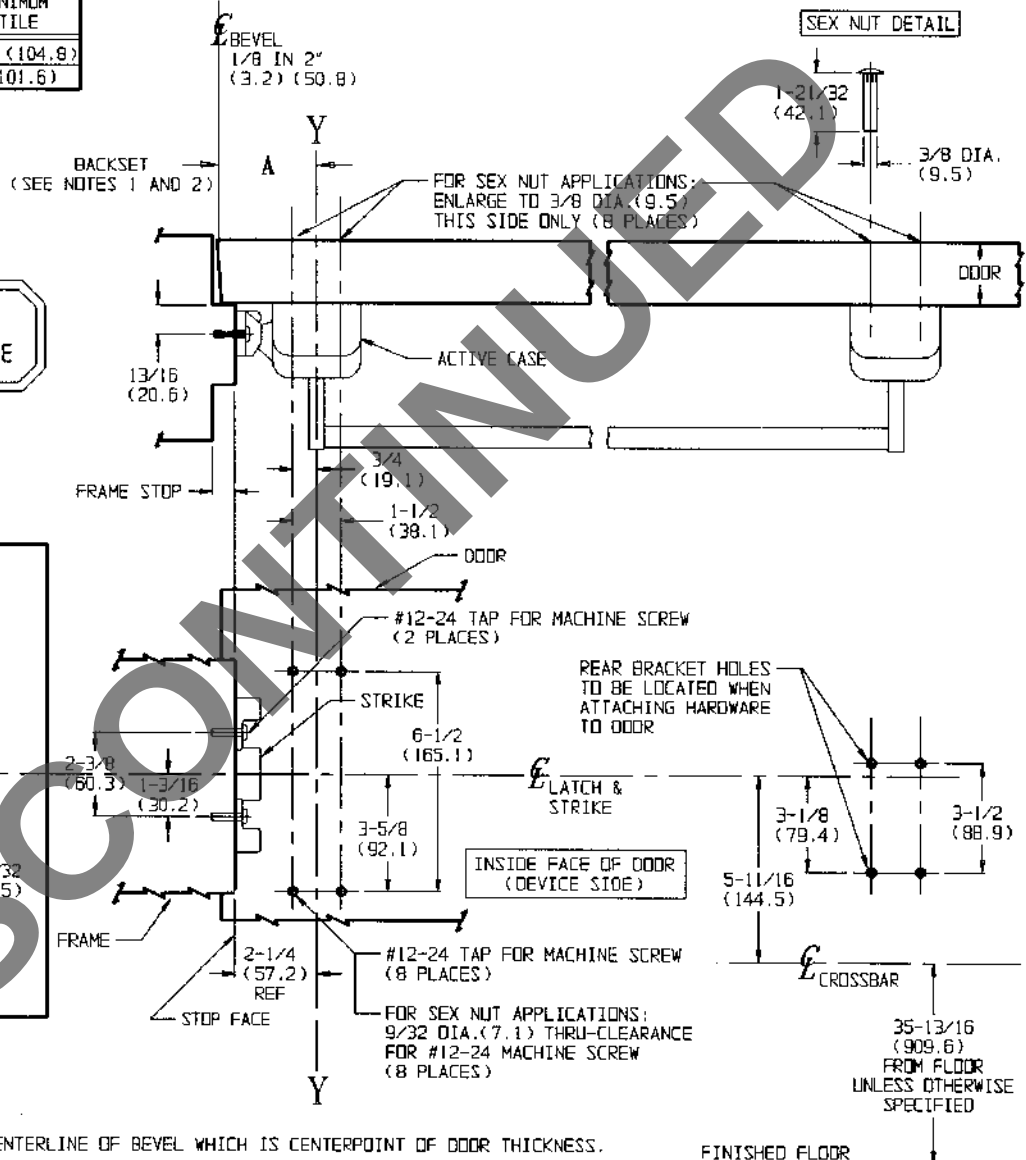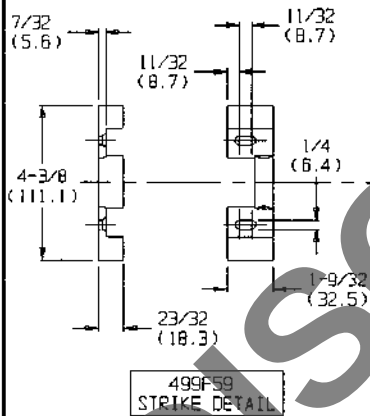

NOTES:

- BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
- CAUTION:** THIS TEMPLATE IS FOR SINGLE DOOR APPLICATIONS ONLY. REFER TO APPROPRIATE MULLION TEMPLATE FOR DOUBLE DOOR APPLICATIONS. NOTE THAT THE BACKSET DIMENSION FOR SINGLE DOORS DIFFERS FROM THE BACKSET FOR DOUBLE DOORS.
- FOR PREPARATION OF TRIM, REFER TO SEPARATE TEMPLATE.
- DIMENSIONS GIVEN IN INCHES AND (MM).

ED6200A Series
Rim Fire Exit Devices
Application to Metal or Wood / Composite Doors

**Corbin
Russwin**
www.corbinrusswin.com

SUPERSEDES	T30508	Do Not Scale Drawing
Template Number	T30508-1	Date
		9/99