

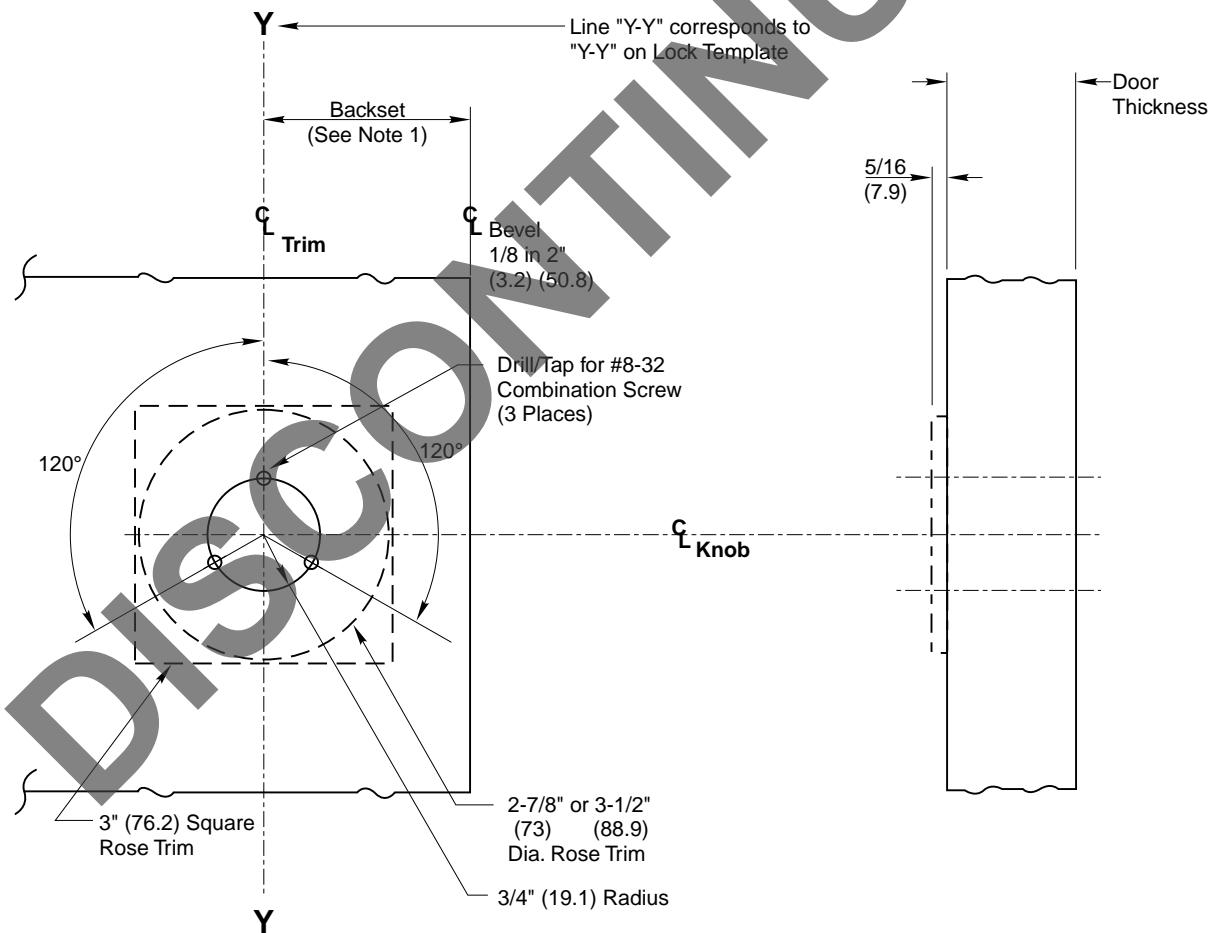
Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Full dummy trim, same as shown except applies to both sides.
3. Dimensions given in inches and (mm).

TEMPLATE CROSS REFERENCE

Description	Template
CK4200 Series Cylindrical Lock	T30341
ML2000, ML2200 Series Mortise Lock	T30600

Trim	Rose Design
BRC	
BWC	2-7/8" Dia. (73)
GRC	
GWC	
BRD	
BWD	3-1/2" Dia. (88.9)
GRD	
GWD	
BRE	
BWE	
GRE	3" Square (76.2)
GWE	

Half Dummy Trim Shown**Trim Side****RESPONSIBILITY**

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

BRC BWD GRE
 BRD BWE GWC
 BRE GRC GWD
 BWC GRD GWE
Knob by Rose
Half and Full Dummy Trim

Corbin Russwin®
www.corbinrusswin.com

Do Not Scale Drawing

Supersedes T30561-1 Dr. App.

Date 8-99 Template Number T30561-2