






www.orcahardware.com

INSTRUCTIONS

PK1212 - ADT Adapter Kit for 1 3/4" Thick Doors

For use with
PK1200 Pocket Door
Frame Kits

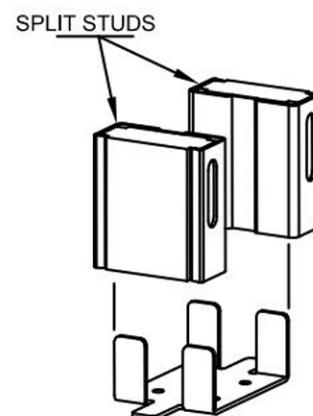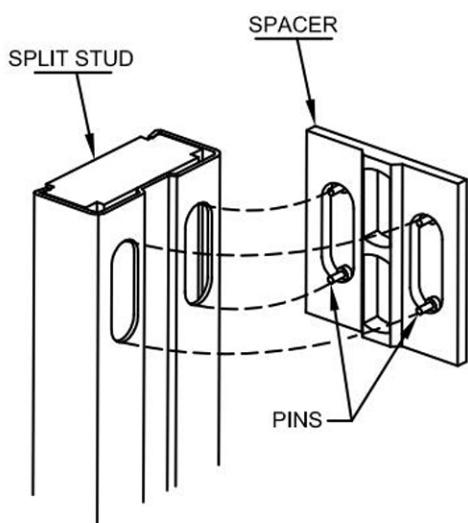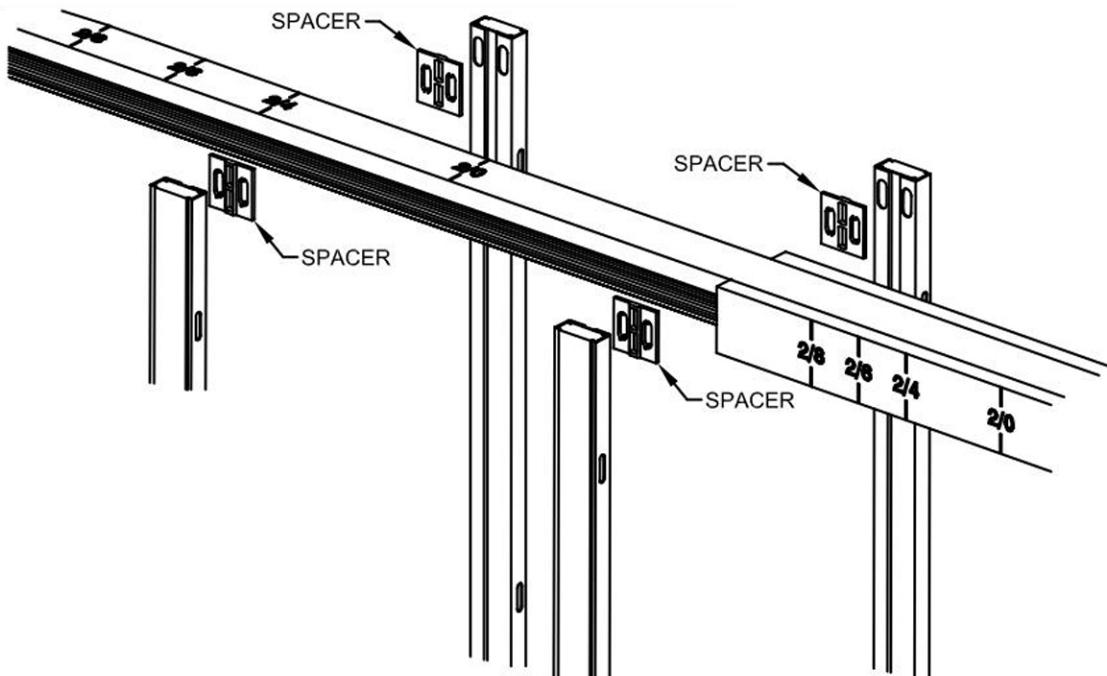

Before assembling Split Studs to header, snap nylon space pads onto top end of each stud. (Small pins fit into nailer slots and hold spacers in place). Nail studs into place as instructed in PK1200 assembly instructions.

Discard standard Floor Brackets and replace with 1-3/4" (44mm) Floor Brackets.