

TEMPLATE FOR APPLYING TRIM ON OUTSIDE OF DOORS WITH MORTISE AND MODEL 73 VERTICAL ROD EXIT DEVICES.

No. 1



OUTSIDE TRIM SERIES NUMBERS
WITH KEY OPERATIONS:
MODEL 73 VERTICAL ROD EXIT DEVICE

027
406F33 BELMONT X 777
MORTISE EXIT DEVICE

027M
406F33 BELMONT X 778N

[MR Symbol Indicates Master Ring Cylinder].

Your trim may be furnished with lever handle in place of knob.

BEFORE PROCEEDING LINE UP TEMPLATE CAREFULLY AS FOLLOWS:

- (1) LINE UP CYLINDER HOLE CENTER LINES WITH CENTERLINE OF CYLINDER HOLE DRILLED THROUGH FROM INSIDE OF DOOR.
- (2) BE SURE TEMPLATE EDGE IS PARALLEL TO EDGE OF DOOR.

**CAUTION: DRILL ONLY HOLES WHICH APPLY
TO YOUR TRIM INSTALLATION.**

CENTERLINE
OF CYLINDER


**TRIM THROUGH BOLT HOLES, DRILL
THROUGH DOOR FOR NO. 12 - 24 MACHINE
SCREWS. REDRILL HOLES ON OUTSIDE OF
DOOR TO 1/2" DIA. - 1" DEEP.**

**MORTISE EXIT DEVICE CYLINDER HOLE,
DRILL THROUGH TO LOCK MORTISE.**

**VERTICAL ROD EXIT DEVICE MODEL 73,
CYLINDER HOLE, DRILL THROUGH DOOR**

HOLE DIAMETER

REGULAR CYLINDER - 1 1/4" DIA.
MASTER RING CYLINDER - 1 9/16" DIA.

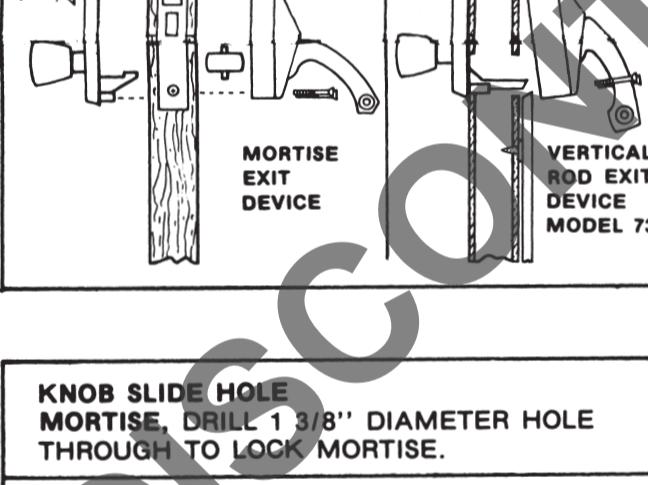

**KNOB SLIDE HOLE
MORTISE, DRILL 1 3/8" DIAMETER HOLE
THROUGH TO LOCK MORTISE.**

**VERTICAL ROD EXIT DEVICE MODEL 73, DRILL
1 1/4" DIAMETER HOLE THROUGH DOOR.**

**TRIM THROUGH BOLT HOLES, DRILL
THROUGH DOOR FOR NO. 12 - 24 MACHINE
SCREWS. REDRILL HOLES ON OUTSIDE OF
DOOR TO 1/2" DIA. - 1" DEEP.**

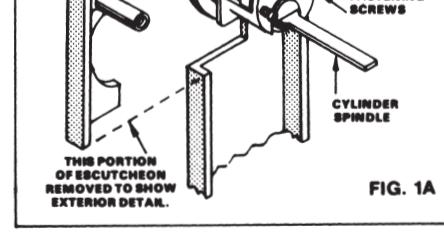


FIG. 1A

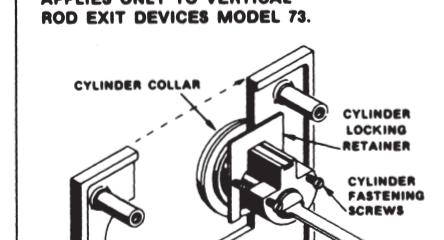


FIG. 1B

THIS
OR
THIS

CENTERLINE
OF CYLINDER

No. 2

OUTSIDE TRIM SERIES NUMBERS
NO KEY OPERATION.
MODEL 73 VERTICAL ROD EXIT DEVICE

027B - OPERATING KNOB
406F33 BELMONT X B777 - OPERATING KNOB

027D - RIGID KNOB
406F33 BELMONT X D777 - RIGID KNOB

MORTISE EXIT DEVICE

027BM - OPERATING KNOB

406F33 BELMONT X B778N - OPERATING KNOB

027D - RIGID KNOB

406F33 BELMONT X D778N - RIGID KNOB

406F33 BELMONT X D778N - RIGID KNOB

027BM - OPERATING KNOB

406F33 BELMONT X B778N - OPERATING KNOB

027D - RIGID KNOB

406F33 BELMONT X D778N - RIGID KNOB</p