


# TEMPLATE CROSS REFERENCE


| DESCRIPTION                    | TEMPLATE |
|--------------------------------|----------|
| DL4000 SERIES MORTISE DEADLOCK | T30541   |

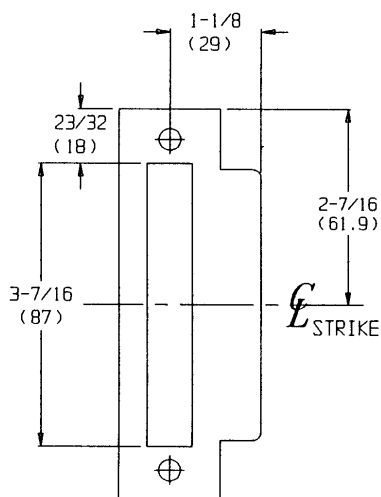


STRIKE DETAIL

## CAUTION: DOOR AND FRAME MANUFACTURERS

WHEN DOOR GASKETING OR SILENCERS ARE USED, PROPER ALLOWANCES MUST BE MADE FOR STRIKE LOCATION TO MAINTAIN A COMMON CENTERLINE WITH LOCK AND DOOR AS SHOWN SO THAT BOLT WILL FREELY ENTER STRIKE.

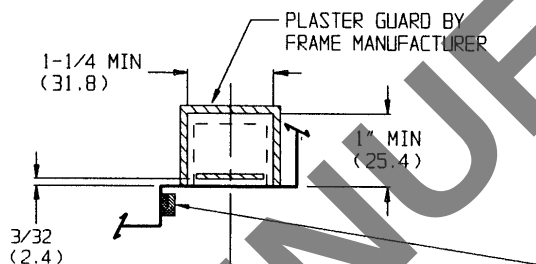

STRIKE/LOCK/DOOR

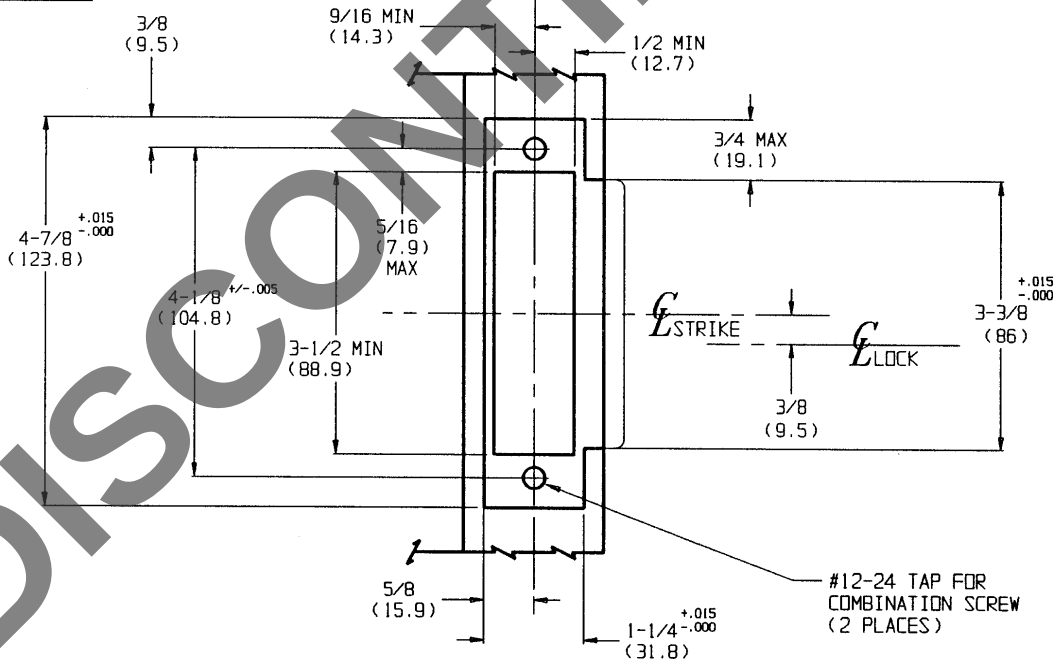

FRAME DETAIL

## NOTES:

1. FRAME PREP MEETS ANSI STANDARDS A115.1 (STEEL) AND A115.W1 (WOOD) FOR MORTISE LOCK STRIKES.

2. DIMENSIONS GIVEN IN INCHES AND (MM).

## TOLERANCES

| INCHES | (MM)   |
|--------|--------|
| .005   | (.127) |
| .015   | (.381) |

## RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

SS Series

240L08 ANSI STRIKE

**Corbin Russwin**  
www.corbinrusswin.com

| DO NOT SCALE DRAWING |         |
|----------------------|---------|
| SUPERSEDES           | DR. DLO |
| DATE                 | 9-95    |
| TEMPLATE NUMBER      | T30657  |