

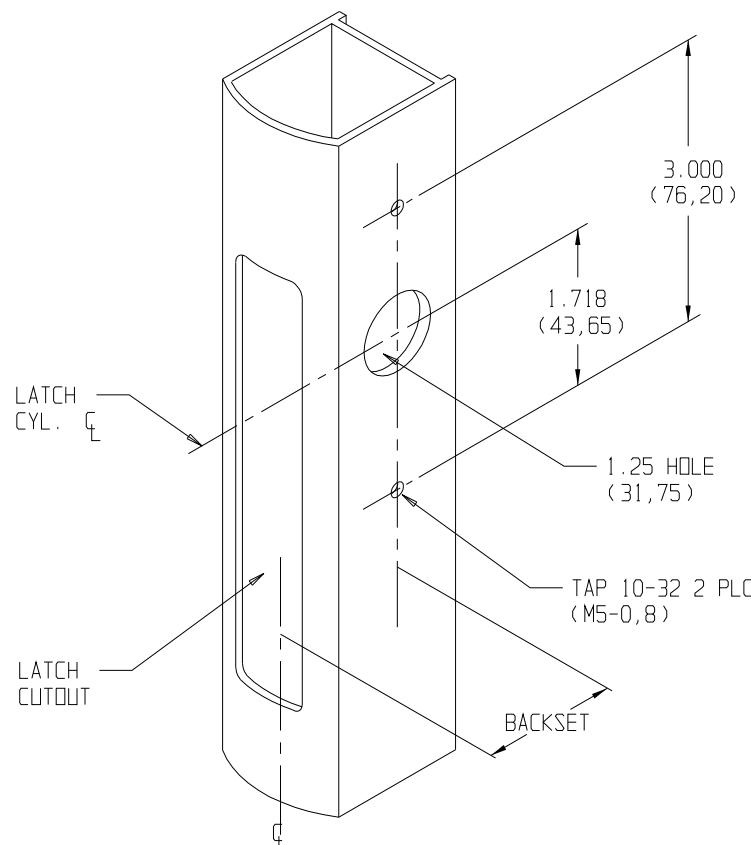


4580 CAM DISC

INCLUDED WITH 4568 HANDLE
REQUIRED TO OPERATE 4500 & 4700
SERIES LATCHES.

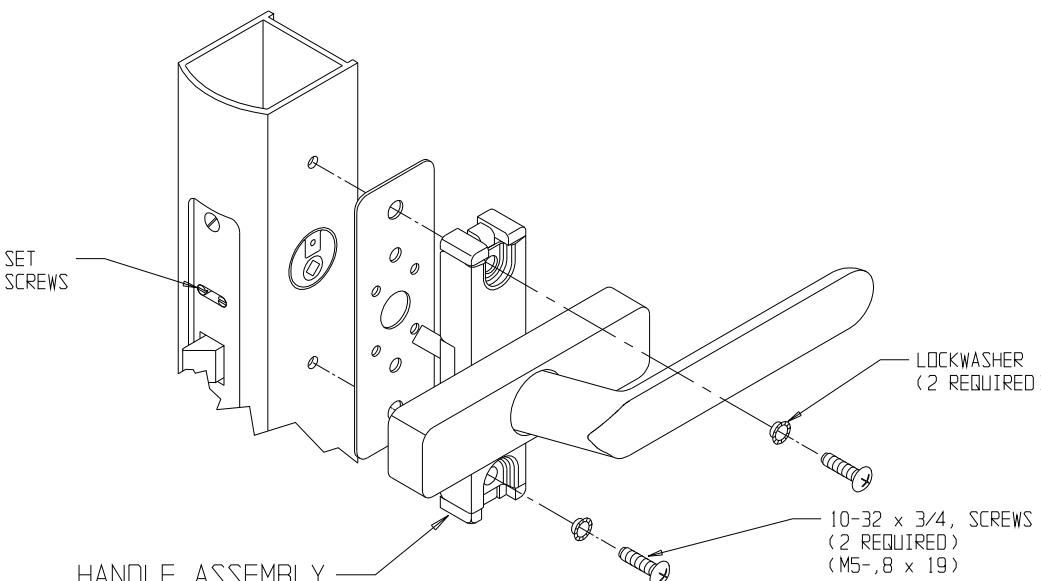

HUB MUST BE
ON DIAMOND
FOR PROPER
INSTALLATION

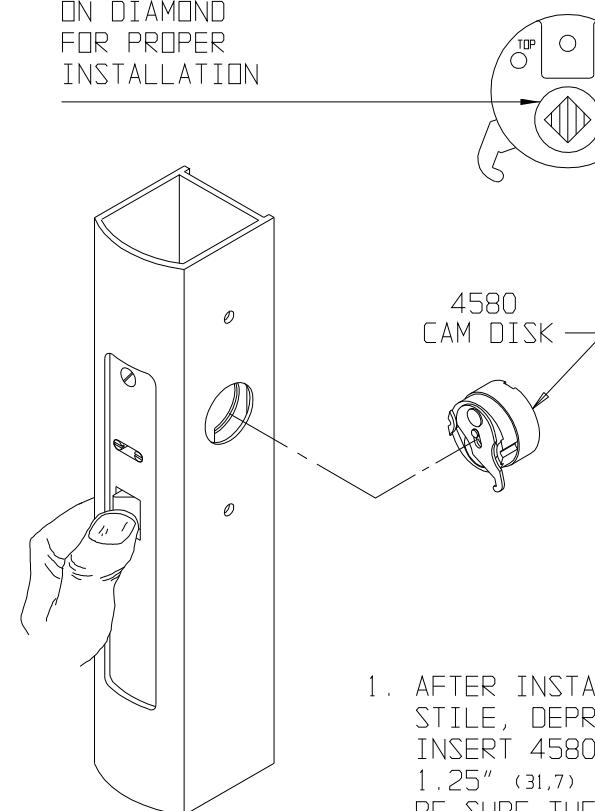

1. AFTER INSTALLING LATCH IN STILE, DEPRESS BOLT AND INSERT 4580 CAM DISC THRU 1.25" (31.7) CYLINDER HOLE AS SHOWN. BE SURE THE HUB IN THE CAM DISC IS ON THE DIAMOND AS SHOWN ABOVE.
2. SEPARATE COVER FROM FRAME BY PUSHING APART. COVER IS RETAINED BY DIMPLES AT EACH END.
3. COVER CANNOT BE SEPARATED FROM HANDLE BUT ROTATES TO EXPOSE MOUNTING SCREW HOLES.
4. INSTALL THE HANDLE ASSEMBLY, INSERTING THE SQUARE SPINDLE INTO THE HUB OF THE CAM DISC. SECURE THE HANDLE ASSEMBLY WITH (2) #10 SCREWS AND LOCKWASHERS (M5). MAKE SURE THE BACK PLATE IS PROPERLY LOCATED ON THE TWO BOSSES ON THE MOLDED FRAME.
5. INSTALL COVER BY PUSHING OVER FRAME UNTIL DIMPLES IN END OF COVER SNAP IN PLACE.
6. TIGHTEN THE SET SCREWS IN THE LATCH MOUNTING PLATE, AND INSTALL THE LATCH FACE PLATE.

STILE PREPARATION
FOR 4568 HANDLE WITH DEADLATCH