


MOUNTING INFORMATION

For Non-Fire Rated Exit Devices:
Sex nuts or through bolts
are recommended for wood core,
wood and plastic covered composite
doors and any type of door without
reinforcements.

For Fire Rated Exit Devices:
Sex nuts or through bolts
are required for wood core, wood
and plastic covered composite doors
and any type of door without
reinforcements.

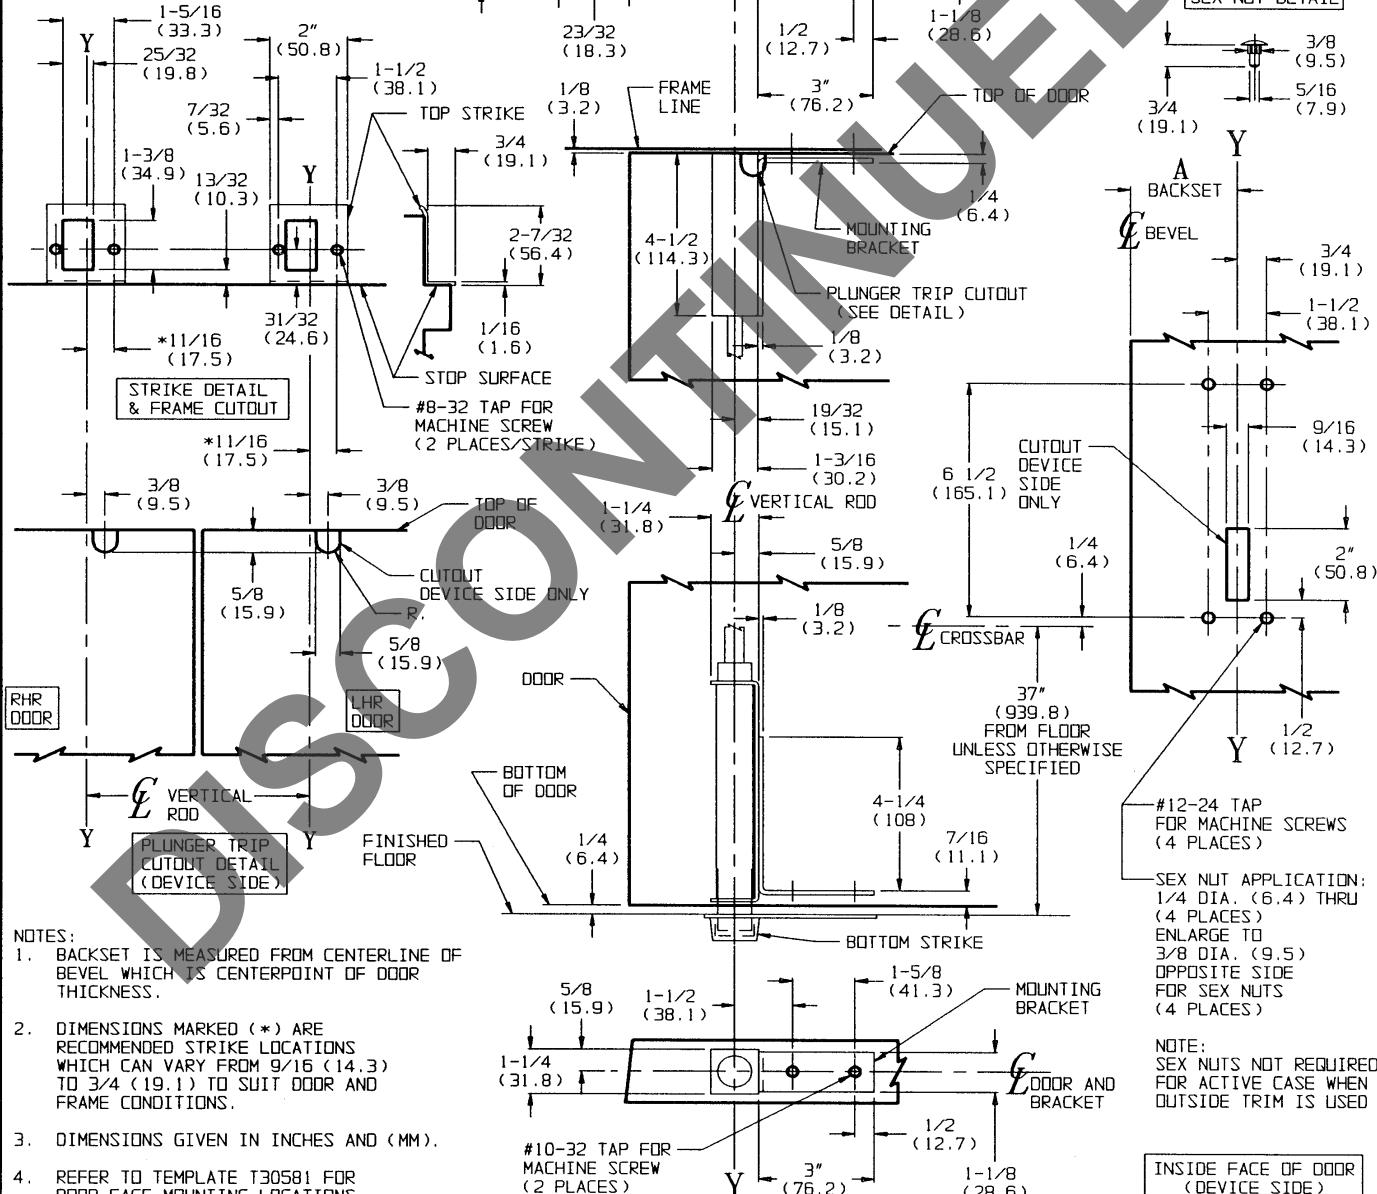

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All Architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ED6800 SERIES ED6800A SERIES

CROSSBAR CONCEALED
VERTICAL ROD DEVICE
(BRACKET MOUNTING - METAL DOORS)

Corbin Russwin
www.corbinrusswin.com

DO NOT SCALE DRAWING
SUPERSEDES VT30242, VT30243 DR. KJ APR. 1993
DATE 4/6/93 TEMPLATE NUMBER T30580