


**Notes:**

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Refer to respective lock series template listed in template cross reference chart for all other dimensions.
3. Dimensions given in inches and (mm).

(3)

Template Cross Reference	
Description	Template
CL3100 SERIES VR LEVER LOCK	T31193
CL3300 SERIES CYLINDRICAL LEVER LOCK	T30684
CLX3300 SERIES CYLINDRICAL LEVER LOCK	T31253
CL33900 ELECTRIC LOCK	T30971

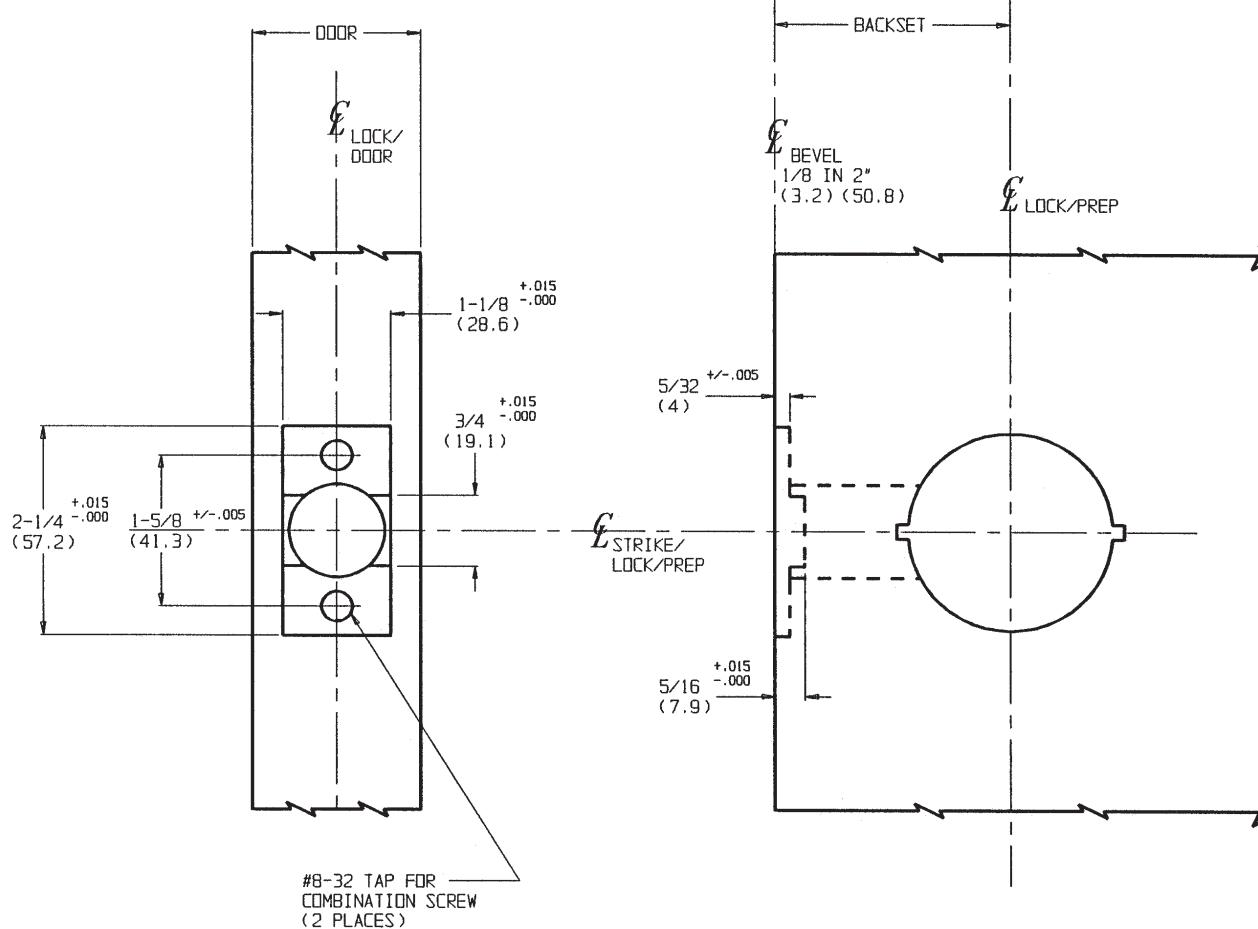

Tolerance Conversion	
Inches	(mm)
.005	(.127)
.015	(.381)

**RESPONSIBILITY**  
 DOOR AND FRAME MANUFACTURERS ARE  
 RESPONSIBLE FOR PROVIDING ADEQUATE  
 CONSTRUCTION OR REINFORCEMENTS FOR  
 PROPER INSTALLATION OF HARDWARE SHOWN.  
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
 BE INSTALLED ON PROPERLY REINFORCED  
 DOORS AND FRAMES, REGARDLESS OF TYPE,  
 MATERIAL, OR METHOD OF CONSTRUCTION.

**M16  
3/4" Latch Assembly**

**Corbin Russwin**

**ASSA ABLOY**

[www.corbinrusswin.com](http://www.corbinrusswin.com)

SUPERSEDES	T30528-2	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30528-3	SHEET 1 of 1
		DATE 03/21